

# BUCKINGHAM MFG.

## P/N N14 SERIES

### Replaceable Lanyard Parking Attachment Element


The Replaceable Lanyard Parking Attachment Element is intended for use in stowing the connecting hardware of your lanyard when not in use. The loop will release, (at a force of less than 120 lb.), the parked end of the lanyard in the event that the lanyard is snagged on an object.

Kit Includes: (Fig. 1)

- One Breakaway Loop Element
- One Removable Friction Buckle

NOTE: Color may vary from that shown.

Fig. 1

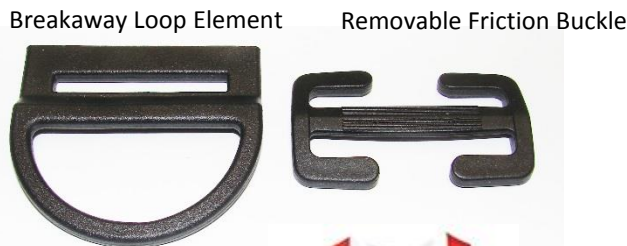

#### Installation Instructions:

1. Determine which side of the harness you want to install the Replaceable Lanyard Parking Attachment Element. Typically it is installed between the chest strap / sternal attachment and the shoulder / shoulder pad area of the vertical strap (Fig. 2).
2. Fold the vertical strap of the harness onto itself to create a web loop (Fig. 3) and insert it through the slot of the breakaway loop element. Ensure the off-set section of the breakaway loop element is facing away from the webbing and towards the bottom section of harness (Fig. 4 - 5).
3. Open the web loop and insert the removable friction buckle through the opening with the ridge lines on the center bar facing up (Fig. 6).
4. Insert the webbing under the four tabs of the removable friction buckle (Fig. 7).
5. Pull webbing tight seating the removable friction buckle onto the breakaway loop element (Fig. 8).
6. Position the Replaceable Lanyard Parking Attachment Element at the desired location (Fig. 9).

Typical location for Lanyard Parking Attachment Element on front of harness

Fig. 2

Fig. 3

Fig. 4

Fig. 5

Fig. 6

Fig. 7

Fig. 8

Fig. 9



Note: The Replaceable Lanyard Parking Attachment Element is designed to breakaway at less than 120 lb. as required by ANSI Z359.11. Once broken it will need to be replaced. Follow the Removal Instructions.

### **Removal Instructions:**

1. Feed the webbing through the removable friction buckle to create slack and form a loop (Fig. 10).
2. Remove the removable friction buckle from the webbing (Fig. 11).
3. Remove the broken breakaway loop element by pulling the webbing out of the slot (Fig. 12).
4. To install a new Replaceable Lanyard Parking Attachment Element follow the installation Instructions above.

Fig. 10



Fig. 11



Fig. 12



### **Warnings:**

The Replaceable Lanyard Parking Attachment Element must:

1. only be used for attachment of lanyard connectors when the lanyard is not in use.
2. Never be used as a fall arrest, fall restraint or work positioning attachment.
3. not be installed where it can interfere with the operation of the other hardware or connection points of the harness.
4. Not be attached to oversized or multiple connectors as they may cause it to slide from its original position.

**NOTE:** This product cannot be returned unless it is in new / unused condition.

**Buckingham Mfg. Co.**

Binghamton, NY

[www.buckinghammfg.com](http://www.buckinghammfg.com)

1-800-937-2825

Information contained in these written instructions supersedes all other information (written, audio, video etc.) produced by Buckingham Mfg. prior to the revision date of this document.