

BUCKINGHAM MFG

PN 5005TC Captive Pin Insertion Instructions Instructions / Warnings

The PN 5005TC Captive pin (Fig. 1) is designed to be installed in the Buckingham PN 5005T carabiner(s), which are supplied with pre-drilled captive pin holes in the frame (Fig. 2). This carabiner is included with the SuperSqueeze, EZSqueeze and select BuckAdjuster models.

Fig. 1



Tapered End

Locking End

Installation:

1. Locate the outside and inside holes for the captive pin in the carabiner frame (Fig. 2)
2. Ensure the carabiner is properly installed and oriented as desired.
3. Insert the tapered end of the captive pin into the carabiner's outside captive pin hole (Fig. 3 -45)
4. Ensure the tapered end of the captive pin starts into the inside carabiner's inside captive pin hole (Fig. 5).
5. With a hammer, carefully strike the exposed locking end of the captive pin until it is fully seated into the carabiner hole (Fig. 6 – 8). Use caution not to damage the carabiner.

Fig. 2

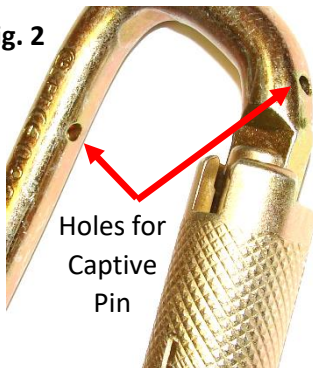


Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Warnings:

- Know the job and the regulations governing performance requirements and select the proper equipment.
- Read carefully, understand, and heed these and all other included instructions, warnings, and cautions before using equipment. Failure to do so could result in your serious injury or death. Should questions arise concerning the proper use or condition of your equipment, contact Buckingham Manufacturing Co. at 1-800-937-2825.
- This equipment is intended for use by properly trained professionals only.
- Be certain this equipment is suitable for the intended use and work environment. If suitability for intended use is in doubt, consult a safety engineer or contact Buckingham Mfg. before using.
- Only use the Buckingham PN 5005TC captive pin on Buckingham PN 5005T carabiners with the pre-drilled captive pin holes.
- Never drill holes in a carabiner to install the captive pin.
- Only Buckingham Mfg. Co., or those authorized in writing by Buckingham Mfg. Co., may make repairs to this equipment.
- Product covered under these instructions / warnings should not be resold / redistributed or re-used after use by original user.

Buckingham Mfg. Co.

Binghamton, NY

www.buckinghammfg.com

1-800-937-2825

Information contained in these written instructions supersedes all other information (written, audio, video etc.) produced by Buckingham Mfg. prior to the revision date of this document.