
BUCKINGHAM MFG.


BIG BUCK WRAP PAD MODEL NO. 3202 & 32021

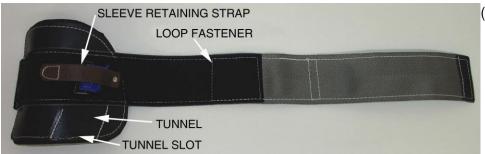

(Right Side shown)

Assembling Pad to Climber

- 1. Squeeze the pad so the tunnel protrudes outward, away from the pad.
- Properly orientate climber and push the sleeve (attached to climber) from the bottom upward until the sleeve loop is exposed in the tunnel slot.
- 3. Adjust the length of the climber using the adjustable climber sleeve so that the top of pad is 1/2" below the projecting knee bone. (Fig. 'A')



5. Adhere the sleeve retaining strap to the loop fastener on the pad.

Attaching Pad to Leg

- 1. Place foot on the stirrup of the climber. The padded, fabric portion of the pad should be toward the inside of the leg.
- 2. Wrap the pad around the leg so that the hook fastener portion covers the sleeve retaining strap and adheres to the loop fastener.





Fig. 'A'


3. Always ensure that the pad is wrapped to the MINIMUM WRAP LABEL or beyond (Fig. B). Failure to do so may cause release, resulting in serious injury or death.

*Note: Attach and fasten foot strap for climber after attaching pad to leg. (Fig 'A' and 'C')

Cleaning

Proper maintenance and storage of your equipment will prolong its useful life and contribute toward its performance.

Nylon should be cleaned with mild soap and water and be allowed to air dry thoroughly without using excessive heat. Do not use any type of corrosive substance or acid, which will gradually eat away the fabric.



Clean hook & loop fasteners with a soft bristle brush.

Clean leather by removing surface dirt with a clean cloth dampened (not wet) with water and allow to air dry.



Fig. 'B'



Fig. 'C'

BUCKINGHAM MFG. CO., INC.

BINGHAMTON, NY 1-800-937-2825 Fax 607-773-2425 e-mail - sales@buckinghammfg.com

Information contained in these written instructions supersedes all other information (written, audio, video etc. produced by Buckingham Mfg. prior to the revision date of this document.