
BUCKINGHAM MFG.

PN 21402 – HOOK & LOOP FASTENER FOOT STRAPS WITH QC BUCKLE ATTACHMENT INSTRUCTIONS (USE WITH RING TYPE CLIMBERS ONLY)

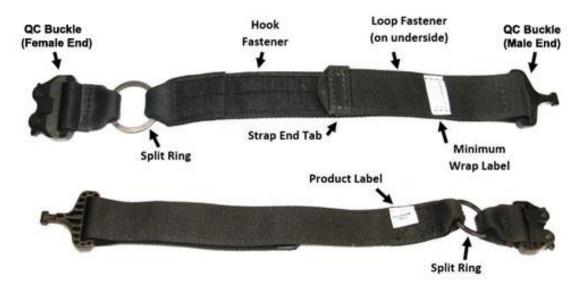

Note: hardware, materials and colors may vary from that shown.

Attach the foot strap to the climber by separating the split ring and inserting it thru the climber ring as shown in Fig. 1. Rotate the split ring until it is completely inside the climber ring. Ensure the female half of the QC Buckle is towards the front of your foot and the strap end tab is facing down when the strap is lying flat as shown in Fig. 2.



Step into the climber (Fig. 2).




Wrap the footstrap around the back of your ankle and over the top of your foot (Fig. 3).



Insert the male half of the QC buckle into the female half of the QC buckle (Fig. 4).

Fig. 4

To tighten the foot strap, grasp the strap end tab and pull the tail of the foot strap towards the QC buckle separating the loop fastener from the hook fastener (Fig. 5). Once released, pull the tail away from the QC buckle and through the slot of the male half of the buckle, tightening the strap until snug on your foot. Finally, fold the strap over and attach the strap loop fastener to the strap hook fastener. To ensure a proper wrap, always ensure that as a minimum the minimum wrap label, has been pulled through the slot of the male half of the QC buckle (Fig. 6), before aligning and attaching the hook fastener to the loop fastener. Failure to do so, may cause release, resulting in serious injury or death.

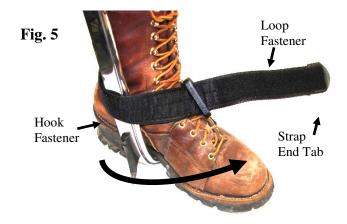





Note: If the minimum wrap label will not pull through the slot of the m ale half of the QC buckle (Fig. 7) do not use the strap. Replace the strap with a longer one to ensure proper bonding of the hook and loop fastener.



BUCKINGHAM MFG. CO. BINGHAMTON, NY 1-800-937-2825 www.buckinghammfg.com